

Patio Heater Instructions



- Make sure that there is a 24" clearance around heater head at all times.
- Heater is not designed to be used indoors or in enclosed areas such as garages, commercial buildings, tents, or other enclosures.
- Heater is to be placed on firm, level, stable ground. Do not move heater while it is in operation.
- Let unit cool at least 20 minutes before touching any part heater head or reflector.

Assembly Instructions

If your heater is not already assembled, please follow these instructions to assemble your outdoor heater.

1. Position lower base and cover in desired heating location (Please note 24" clearance requirement).
2. Attach heat reflector to Post/Heater Head Assembly via 3 Wing Nuts located on Heater Head.
3. Insert Post/Heater Head Assembly into opening on top of lower base, with fuel tube sticking through hole.
4. Raise decorative and secure while attaching hose/regulator assembly onto end of fuel feed line. It is not necessary to over-tighten this connection.
5. Insert propane cylinder into lower base and attach loose end of hose/regulator assembly. It is helpful to "wiggle" the black knob while turning to make sure there is a tight connection between tank and regulator.
DO NOT USE A WRENCH TO TIGHTEN THIS CONNECTION. HAND TIGHT IS SUFFICIENT.
6. Lower decorative cover over lower base assembly.
7. Your outdoor heater is now fully assembled.

Lighting Instructions

1. Make sure that the heater control knob is in **OFF** position.
2. Raise decorative cover on lower base and turn tank valve to ON by turning counter-clockwise. **TURN VALVE SLOWLY TO PREVENT SAFETY FEATURES FROM BEING ACTIVATED.** (If regulator assembly is not properly engaged into tank, the flow of gas will be interrupted by the safety shut off device.
3. Gently depress control knob and rotate counter clockwise to the **PILOT** position. **IT MIGHT BE NECESSARY TO DEPRESS CONTROL KNOB FOR UP TO 2 MINUTES TO PURGE AIR FROM FUEL DELIVERY SYSTEM AND GET FLOW OF GAS TO IGNITE.**
4. Insert provided Patio Lighter into small hole located on bottom of heater head and ignite patio lighter.
5. After pressing control knob for 30 seconds, rotate knob to **ON** position while lit patio lighter is inserted.
6. If heater does not light, rotate control knob back to **PILOT** and repeat steps 4-6, until lit. **YOU MIGHT HAVE TO REPEAT THESE STEPS SEVERAL TIMES. PLEASE BE PATIENT.**
7. Once lit, it is ok to rotate control knob back to **PILOT** position until ready for outdoor heating.

Note: If above lighting instructions do not result in a successful lighting attempt, it is possible that some of the built in safety devices might have been activated. Please turn control knob to OFF, close tank valve, disconnect regulator assembly and wait 5 minutes before attempting to re-light heater. After 5 minutes, please attempt to re-light by following the instructions listed above.

Turning Off Heater

- Turn control knob to OFF position. You may hear slight popping sound when main burner shuts down.
- Raise decorative cover or reach through side opening and turn valve clock-wise to stop flow of gas.

IF YOU HAVE ANY ISSUES OR QUESTIONS CONCERNING THE LIGHTING OF YOUR HEATER, PLEASE CALL OUR MAIN NUMBER FOR ASSISTANCE. PLEASE LIGHT HEATERS SEVERAL HOURS BEFORE OUTDOOR HEATING IS NEEDED.